




### COMPONENTS:

- 2 Caster Rail Sets
- 8 Screws

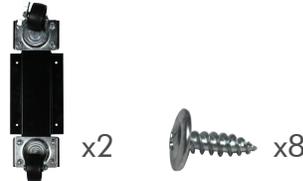


### PLEASE NOTE:

You will need a drill with a Phillips #2 drill bit for installation.

Caster Kit is designed to be compatible with all Aristata units (Single, Double, and Triple).



- 1 Carefully tip the unit on it's back.

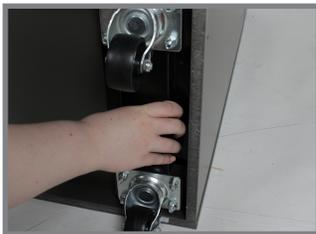

- 2 Align one caster rail set along the inside edge of the right side of the unit.

*Please Note:* The locking caster should be against the front of the unit, especially when the unit will be placed against a wall. This is so that the locking casters are easily accessible.



- 3 Hold the caster rail set in place as you fasten the screws into the unit through the designated holes.

*Tip:* Drill in the second screw diagonal from the first screw, and tighten all four screws at the end.



- 4 Repeat this process for the left side of the unit with the second caster rail set.