


Note: Magnets will be installed into the six numbered holes shown in FIG. 1

FIG. 1

EACH MAGNET KIT INCLUDES:

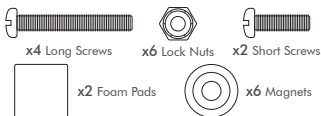

WARNING! Magnets are very strong
 Install each magnet one at a time and keep it away from the remaining magnets



FIG. 2



FIG. 3



FIG. 4



FIG. 5

STEP-BY-STEP INSTRUCTIONS

TOOLS REQUIRED: Robertson #2 or Slotted Screwdriver + 3/8" Combination Wrench

- 1 Thread a long screw into the hole in the center of a magnet with the head of the screw settling into the recessed portion of the magnet. (FIG. 2)
- 2 From the back of the bracket, thread the long screw with the magnet into hole #1. (FIG. 3)
- 3 Holding onto the button head of the screw, attach a lock nut onto the exposed thread of the screw showing on the front of the bracket. *NOTE: Only thread screw until resistance is felt. The nut should just be covering the end of the bolt and should not be tightened any further. This allows the magnets to self-center and better adhere to both flat and rounded surfaces.* (FIG. 4)
- 4 Repeat steps 1 - 3 on holes #2 to #4.
- 5 On holes #5 & #6, use the two remaining short screws, magnets and nuts and follow steps 1 and 2. Only for these two, you will need to tighten the nuts so that the bolt protrudes flush with the face of the nut, bringing the magnets tight against the back of the bracket. Use the required tools to complete this step. (FIG. 5)
- 6 If mounting onto a flat surface, place one of the provided double sided foam squares on top of each magnet placed in hole #1 & #2. If mounting onto a curved surface, place one double sided foam square on top of each magnet placed in hole #5 & #6.
- 7 Place hand sanitizer bottle or wipes container into the Anywhere Bracket and tighten bungees. The Anywhere Bracket™ is now ready to be mounted to your magnetic surface.