

### TOOLS REQUIRED:



Ratchet with 9/16" socket



1/2" Masonry Drill Bit



Drill



x 4

3" Lag Bolts

### HARDWARE PROVIDED FOR ASSEMBLY:

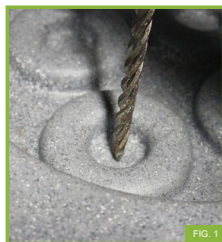


FIG. 1



FIG. 2



FIG. 3

### STEP-BY-STEP INSTRUCTIONS

- 1 Place unit in it's location.
- 2 Drill through guide holes in the bottom of the container with 1/2" masonry drill bit. **(FIG. 1)**
- 3 Place large bolt in hole and hammer until flush with base. **(FIG. 2)**
- 4 Tighten with a 9/16" socket and repeat step 2 for the rest of the holes. **(FIG. 2 & 3)**