




FIG. 1

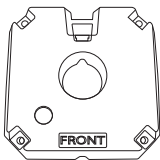

x1) Weighted Base

EACH KIT INCLUDES:



x1) Cap



x1) Label



x1) Insert Rod



FIG. 2



FIG. 3



FIG. 4

STEP-BY-STEP INSTRUCTIONS

- 1 Remove Octo from carton and locate the Weighted Base & Rod.
- 2 Unscrew cap from Weighted Base and will fill with water or sand. Once filled, replace cap and screw to tighten. (FIG. 1)
- 3 Place Weighted Base in desired location for Octo placement. Ensure that the Front verbiage is facing towards you for easier insertion into base. (FIG. 2)
- 4 Place unit slowly over Weighted Base. You will know its properly in place once it settles into the base. (FIG. 3)
- 5 Insert rod through the front channel located on the bottom front surface of Octo. Rod should insert fully and sit flush to Octo surface. (FIG. 3, 4)
- 6 Place provided Busch Systems label over exposed rod front surface. (FIG. 4)
- 7 The Weighted Base is now installed.