


We understand that wipes and sanitizing products are not always available due to the high demand. To accommodate the needs of our customers, this bungee kit can be installed with the clips facing outward if multiple sizes of wipes and sanitizers are being used, or to the back of the bracket if the sizing is consistent.

*Note: The below photos show clips being installed facing the back*

### EACH BUNGEE KIT INCLUDES:

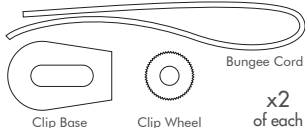

### STEP-BY-STEP INSTRUCTIONS

- 1 Feed bungee cord through the top 2 outer holes on the Anywhere Bracket™. (Fig. 1)  
*NOTE – if you want the clips to the back of the bracket feed the bungee through the front. If you want the clips to the front of the bracket, feed the bungee through the back.*
- 2 Feed one end of the bungee through the bottom of the clip base. Repeat step for the other end of the bungee. (Fig. 2)
- 3 Holding the bungees to the outer side of the clip base, insert the clip wheel through the top of the clip base until the wheel is completely resting within the clip base. (Fig. 3)
- 4 Repeat steps 1 – 3 on the bottom 2 outer holes on the Anywhere Bracket™
- 5 Adjust the bungee to the desired tension by pressing the clip wheel and pulling the two ends of the bungee cord towards you.
- 6 Install the Anywhere Bracket™ in your desired location using screws, bolts, cable ties or the optional Anywhere Bracket™ Magnet Kit. (sold separately)